

# REPAIR KIT FOR HOT TOP2 DISPENSERS

This Repair Kit is being sent in connection with the Gehl Foods voluntary safety recall for the Gehl's HOT TOP2 commercial cheese and chili sauce dispenser models HT2-04 Single, HT2-04 Dual and HT2-03 APS to address a fire & burn hazard which may occur in certain circumstances.

Dispensers with the following serial numbers are included in this recall:  
HT2 164500 through HT2 299689.


***If you need assistance, please contact Gehl Foods directly at 877-440-4008.***

## I. THESE INSTRUCTIONS COVER TWO REPAIRS


- 1) Replacing the fan blade
- 2) Installing a lower metal separator to enclose the heating coil

## II. PARTS INCLUDED IN REPAIR KIT

White Fan Blade

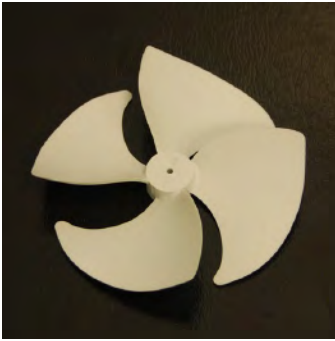

Lower Metal Separator

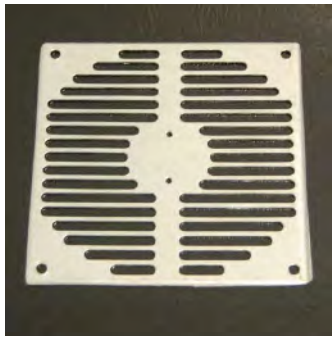



Phillips Screwdriver



Extra Phillips Screws




## III. FOLLOW THESE TEN SIMPLE STEPS TO REPAIR YOUR DISPENSER

 <b>DANGER</b>	
	To prevent electrocution, you <b>MUST UNPLUG</b> the dispenser from the wall outlet <b>BEFORE</b> beginning this repair.

- 1) **IMPORTANT: UNPLUG DISPENSER.** Remove dispenser lid and allow ten minutes to cool. After waiting ten minutes, remove bag(s) of sauce from dispenser. If your dispenser uses a weight, remove weight as well.


Dispenser Lid

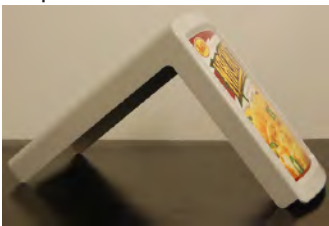

Weight



- 2) Using the provided screwdriver, remove four screws from the hopper (as shown) and remove hopper. Remember, save the four screws.

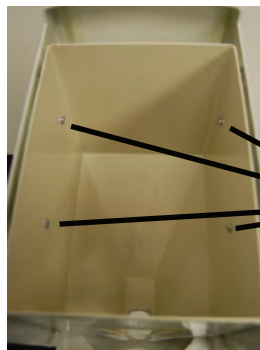


Screws

Hopper



- 3) Remove the four screws holding the heater in place. Remember, save the four screws.


**DO NOT REMOVE ANY OF THE CORDS ATTACHED TO THE HEATER.**

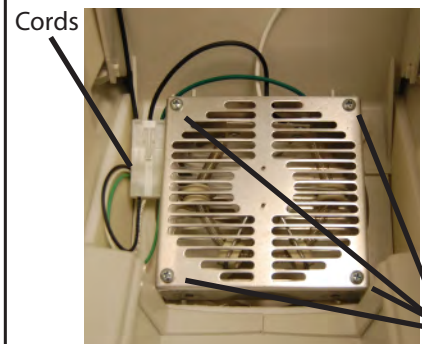


Cords

Screws

4) Pull the heater up, allowing you enough room to reach the fan.

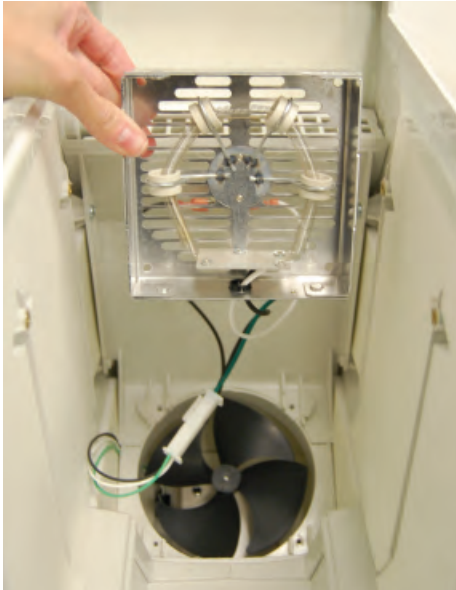

5) Pull off black fan blade. **YOU WILL HAVE TO PULL HARD.** Once removed, throw away fan blade.

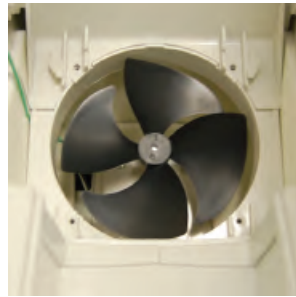



Before removing fan blade

After removing fan blade



Metal Shaft

6) Place new, white fan blade on metal shaft. Align metal shaft with the hole in the fan blade and insert the shaft into the hole. **PUSH DOWN FIRMLY.** Be sure metal shaft slides into hole, not the area next to the hole.

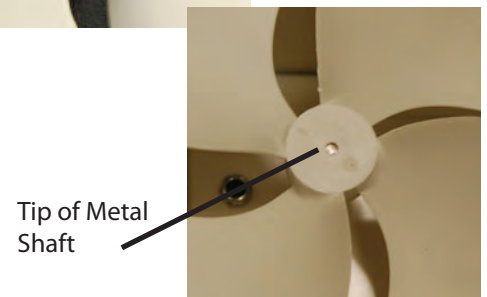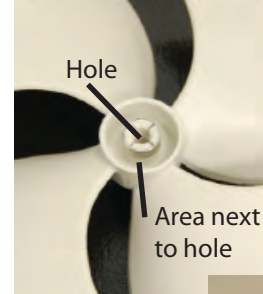


Tip of Metal Shaft


**MAKE CERTAIN THE FAN BLADE IS PUSHED ALL THE WAY DOWN.**

Wiggle the fan blade, if it wiggles, the fan has not been inserted properly. **You should also be able to see the tip of the metal shaft nearly at the top of the hole in the fan.**

7) Place the new lower metal separator over the fan, as shown, **with the slots running horizontally.**

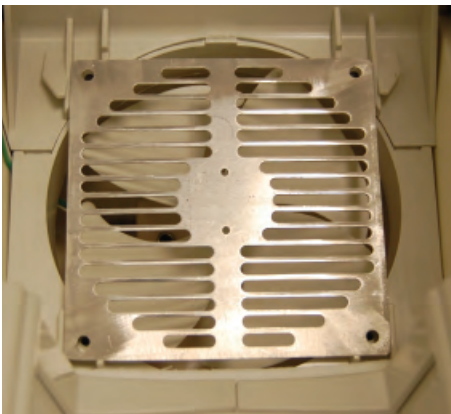

8) Place the heating coil on top of lower metal separator so that the slots are running horizontally, matching the lower metal separator.

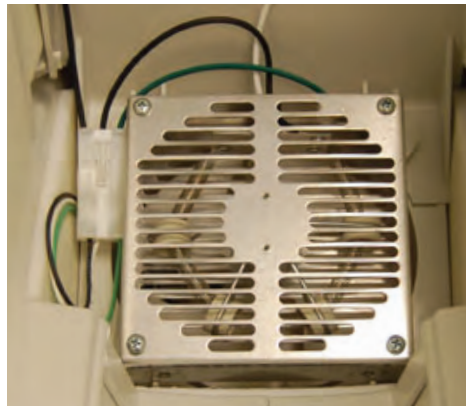

**MAKE SURE THE CORDS ARE LAYING SAFELY NEXT TO THE HEATING COIL AND NOT UNDERNEATH IT.**

9) Replace the four long screws to secure the heating coil in place. Make sure the screws are through the holes on both the heating coil and the lower metal separator.

10) Replace the hopper using the four short screws. Extra short screws have been included in case you lose one.

***Para recibir instrucciones en Español, visita [www.gehlsafety.com](http://www.gehlsafety.com)***

***For additional assistance, call Gehl's Recall Hotline at 1-877-440-4008 8:00 am - 4:30 pm CST Monday - Friday***

***Performing this repair will not void or adversely impact your warranty.***